


# Juggernaut.Case™ BUMPR Installation Instructions

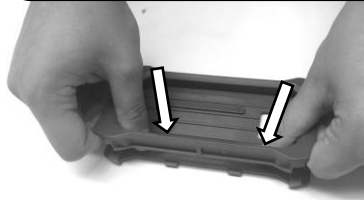

1

open the BUMPR by pushing the back plate out as shown



2

place the front plate face down



3

place one edge of the device down into the faceplate. As you do so take care not to peel the side foams off.



4

place device fully into the faceplate. The device should lie flat and centered.



5

insert the audio plug and USB plug if desired. Install pins into the holes as shown



6

attach back plate by snapping onto front plate.



7

check cables and/or plugs for correct alignment



8

hand tighten 4 screws to finish installation

**Juggernaut.Case™**  
smartphones on the battlefield



Juggernaut.Case™ is a registered trademark of Juggernaut Defense, LLC  
[www.JuggernautCase.com](http://www.JuggernautCase.com)  
©2017, US Patents Pending.  
239-059-122 Rev B